


# Sapphire

For Removal of Calcium Deposits  
& Water Stains

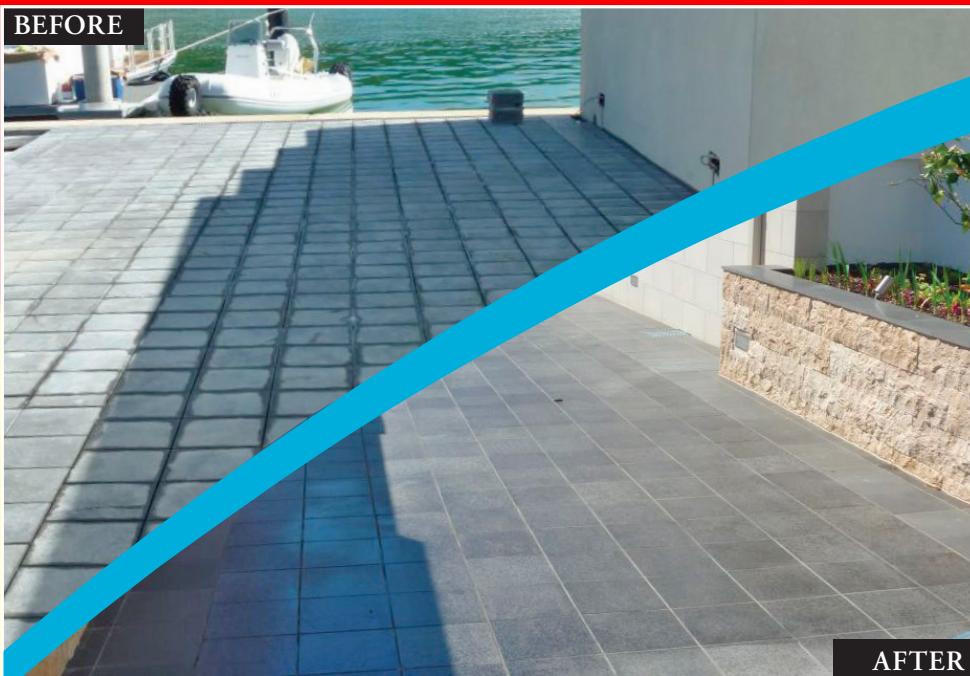

**SAPPHIRE** is a specialty formulated blend of acids and non-ionic surfactants designed to remove stubborn stains such as grout smear, red dirt and scale removal from most masonry surfaces and shower screens.

### Follow the 4 Easy Steps

Always wear Personal Protective Equipment (PPE) – A minimum requirement of Safety Glasses, Gloves & Boots. Damage to clothing may occur.

1. Mix **SAPPHIRE** at 50ml per Litre of water in a plastic watering can and apply to stains. Leave for 5 minutes and gently agitate with an **ENVIRONEX EAGER BEAVER** (Do not let the area dry out).
2. Rinse the area with fresh water.
3. Neutralize the area with a cap full of **REFRESH** pH neutral detergent in 5-10 Litres of water.
4. Rinse with fresh water.

Always test first.



Technical Assistance 1800 999 196  
[www.environex.net.au](http://www.environex.net.au)

*The Next Generation in Specialty Formulators*

